

Mariner Grille and Speaker Removal


This tech notes outlines how to remove the grille and detach the speaker from the bracket on the Mariner 51, 52, 61, 62, 63 & 82.

Tools Needed: Angled pick tool (source: local hardware store)



Step 1

Using the pick tool, carefully pry along the sides of the grille. Be sure to work the grille out equally on all sides. This will prevent it from becoming bent or deformed.

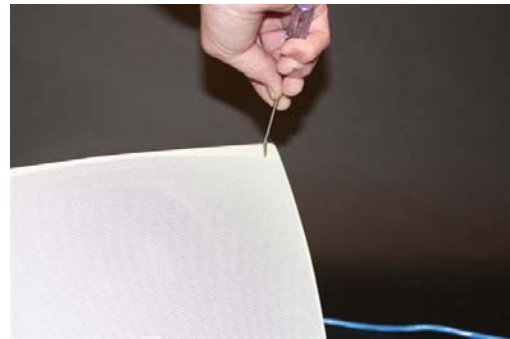

Step 2

Remove the speaker terminal cover, using your fingernail or a small to medium flat blade screw driver.



Spring 2010




Step 3

Disconnect the speaker wires, one at a time, by pressing down on each terminal post and pulling the wire out of the side. Once the individual wires have been disconnected, pull the main wire/cable out from the back side of the speaker/bracket.



Step 4

Locate the locking tabs on each end of the speaker. Using your thumbs, push outward on both the locking tabs *at the same time* and pull the speaker toward you. If one side 'catches' and does not detach, push the speaker back onto the bracket and retry this process.

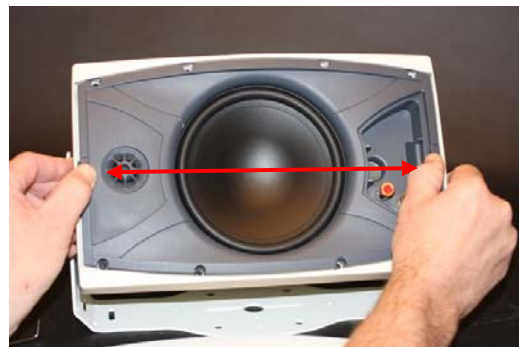

Step 5

The speaker should now slide easily off the bracket.



To re-install the speaker, simply follow the preceding steps in reverse order.